

The **CABINET DES MYSTÈRES** collection

# CRAZY SKULLS TOURBILLON MINUTE REPEATER


How to use your watch

## THE MINUTE REPEATER

The minute repeater is the complication audibly chiming the hours, the quarters and the minutes. The striking mechanism goes off by actuating the trigger on the left-hand side of the case, just until it stops.

When the mechanism starts running, the two hammers striking two bells will produce low-pitched sounds for the hours (repeated as many times as necessary to indicate the intended hour), low-pitched and high-pitched sounds alternatively for the quarter-hours (one quarter-hour = one hammer stroke for hours and one hammer stroke for minutes) and high-pitched sounds for the minutes up to 14 minutes.

Example for 3 h 38: 3 low-pitched sounds for 3 h, 2 alternating low-pitched / high-pitched sounds for 2 quarter-hours, and 8 high-pitched sounds for 8 minutes.

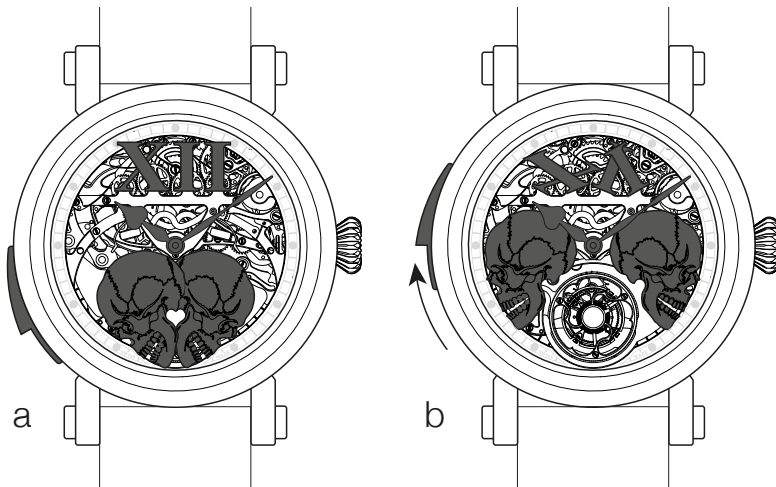


**a. Closed mode:**

The watch is in the time display mode.

**b. Open mode:**

Activation of the minute repeater by pushing the trigger to the maximum. The watch chimes the hour, the quarter-hours and the minutes. The 2 skulls simultaneously move apart to unveil the tourbillon, and the XII markers dissolve.

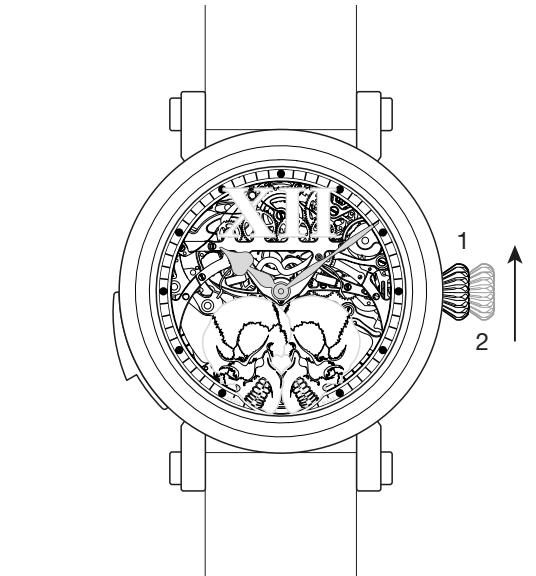

## WATCH SETTING

TWO-position crown

**1. Neutral and winding position**

Allows the user to manually wind their watch by turning the crown upwards.

**2. Time setting position**

Allows the user to set the time by turning the crown and turning the hands to the right time.

**Never set off the minute repeater when the watch is in the midst of setting the hour, and conversely. Doing this could damage the movement.**



**SPEAKE-MARIN**

### CAUTION

Every time you change the time, remember to put the crown back in position 1.

### WARNING

Your watch is guaranteed water-resistant to 3 bars (30 m) provided the crown is placed back in position 1.